


Instructions For Securing Conduits To Bore Spacers With PB750 Nonmetallic Strapping



1. Tools and materials required.



2. Cut off a length of strapping that is approximately 16 inches longer than the distance around the conduits being secured.

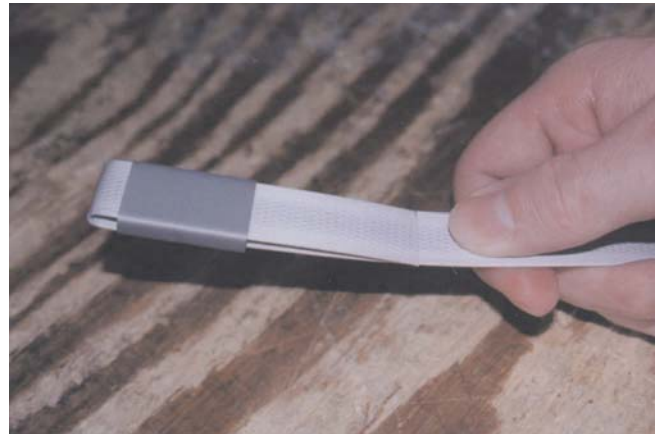

UNDERGROUND DEVICES
INCORPORATED



3304 COMMERCIAL AVENUE
NORTHBROOK, ILLINOIS 60062
Phone: (847) 205-9000 • Fax: (847) 205-9004




7. Pull the strap with the pre-assembled seal around conduits as shown.




8. Place a seal over both ends of the strap. The seal should not interfere with the folded over end of the strap.




9. Take the slack out of the strapping, then fold the upper strap end back as shown. This fold will normally keep the strapping snug while performing step 10.

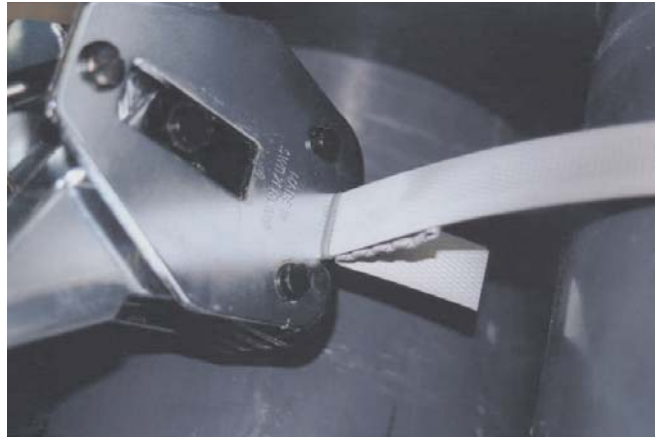


10. Place the open sealing tool over the seal.

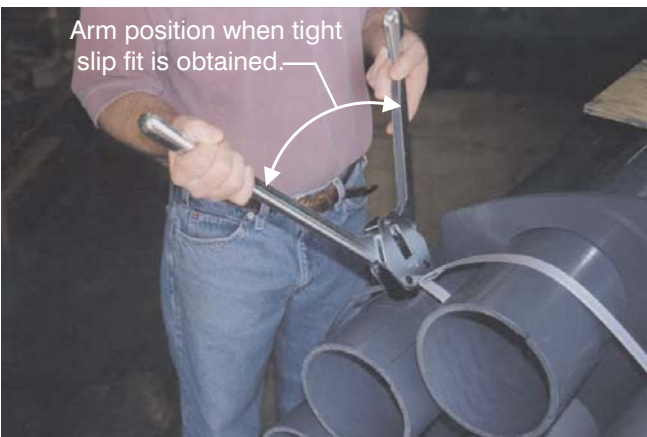

11. Close the sealing tool just enough to form a tight slip fit between the seal and the bands.

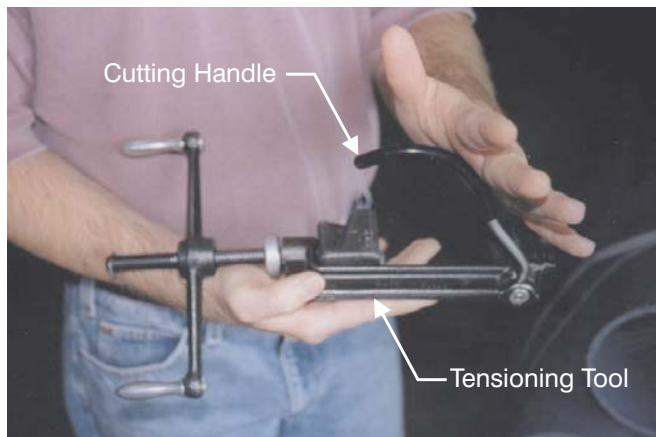


12. Close cutting handle of tensioning tool.

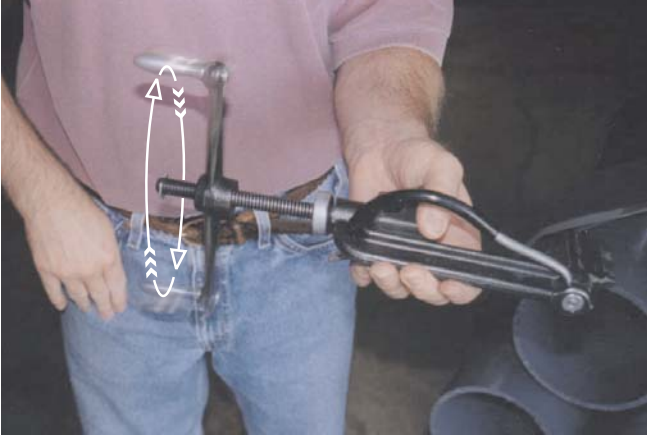


13. Spin tensioning tool handle counter-clockwise until it hits "E" ring stop.



14. Open gripper lever.

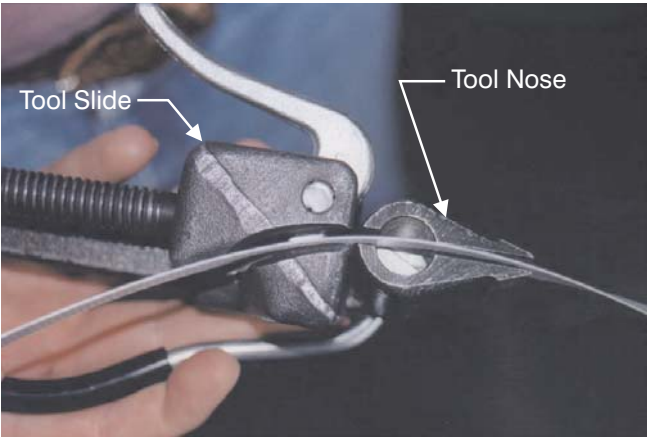


15. Insert strapping into slot in tool nose and tool slide

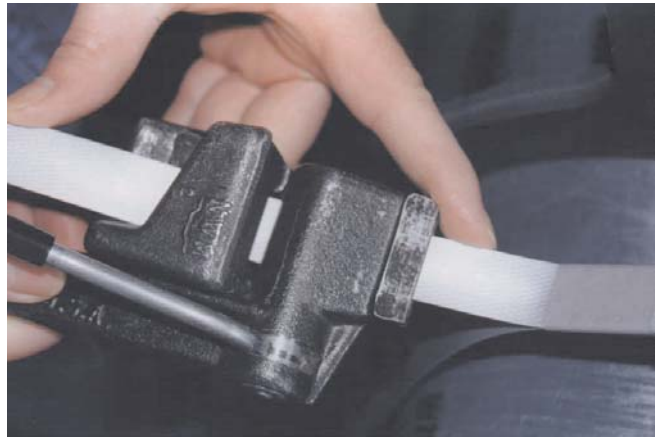

16. Push strapping to the bottom of the slot.



17. Holding the tool slide against the tool nose, pull the strapping back until the tool nose presses against the seal.

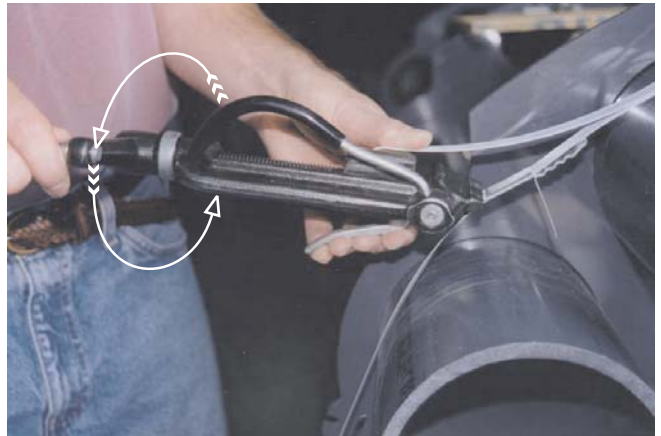

18. Hold strapping and tool gripper lever as shown while rotating the tool handle clockwise until the strapping is fully tensioned.



19. Place the open sealing tool over the seal.



20. Close the sealing tool completely.



21. Open the cutting handle. This action will trim the excess strapping.



22. Above is a close-up view of the sealed strapping joint.



23. Above is a view of a completed bore spacer, conduit and strapping assembly.

UNDERGROUND DEVICES
INCORPORATED



3304 COMMERCIAL AVENUE
NORTHBROOK, ILLINOIS 60062
Phone: (847) 205-9000 • Fax: (847) 205-9004